

Big Boy Concrete-in Ground Anchors

(MK2 & MK3 - Drop Down Telescopic Lock Point)



Shown in ground



Use the lift handle to pull the anchor up to expose the chain guide and insert the chain



Big Boy Security Ground Anchor with 19mm Chain




Big Boy Overall Dimensions: H-274 x 200 x 150mm (approx. 11 x 8 x 6")

(suggested minimum hole size: 300mm deep x 240 x 200mm)

Recommended Fitting Instructions for Flush Fitting

Please note: these Anchors Must be secured into good solid concrete

Installation Diagram & Guide

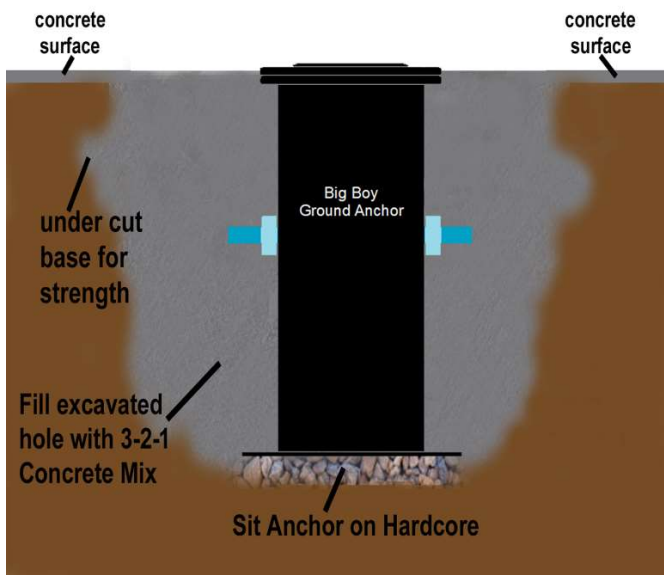

Cut a hole in concrete / ground surface and undercut the base where possible for extra strength

Sit the Anchor on a hard-core base to allow any moisture, rainwater, etc. to drain away

Position the Anchor flush with the original concrete level and fill the excavated hole with a good 3-2-1-mix of concrete (3 parts aggregate + 2 parts sand + 1 part cement), allow concrete to set overnight before use.



Insight Security, Units 1&2 Cliffe Industrial Estate,
Lewes, East Sussex, BN8 6JL
t: 01273 475500 e: sales@insight-security.com www.insight-security.com

